


Felicity Smart WiFi DTU

Quick Install Guide

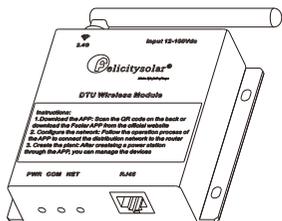

1. Instructions

1.1 Model.

NO	NAME	MODEL	WiFi NETWORK	PICTURE
1	Smart WiFi DTU-S	IOTH2407	2.4G WiFi	
2	Smart WiFi DTU-M	IOTH2406	2.4G WiFi	

LED status:


PWR	ON	Normal power supply
COM	ON	Normal communication with the solar device
NET	ON	Normal communication with the data server

Detailed Pin Function Of RJ45 Port:


	IOTH2406	IOTH2407
PIN1	NA	RS232-RX
PIN2	NA	RS232-TX
PIN3	NA	12V DC Input
PIN4	NA	GND
PIN5	RS485-B	NA
PIN6	RS485-A	NA
PIN7	NA	NA
PIN8	NA	NA

2. Connection between device and Smart WiFi module

The RJ45 of Smart WiFi DTU-S supports RS232 and power interface. If the RJ45 interface of the device cannot provide 12V DC to Smart WiFi DTU-S, then Smart WiFi DTU-S, like DTU-M, needs to be connected to a separate power supply.

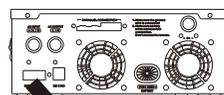

Smart WiFi DTU-S

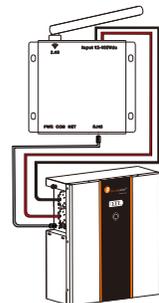

Smart WiFi DTU-M

3. Configure Network

3.1 Download APP

Scan the QR Code on the right side and download the APP.




Fsolar APP

3.2 Connect to Smart WiFi module wireless network

Configure the mobile phone WLAN to connect to the wireless network of the Smart WiFi module.

- 1) Run the APP, enter the login page, click the Setup network button to enter the network configuration page.
- 2) On the network configuration page, click the switch to mobile WLAN page to selection button to enter the mobile phone WLAN page.

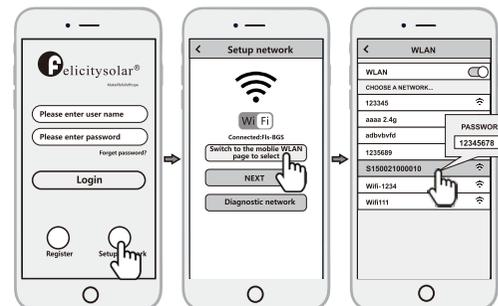


- 3) On the WLAN page of the mobile phone, find the corresponding wireless network name (SSID) of the Smart WiFi module, starting with St e.g. Snnxxxxxxx, the xxxxxxxx is the same as the last 10 bytes of the Smart WiFi module serial number), enter the module wireless network password (default password: 12345678), and connect to the wireless network of the Smart WiFi module.

3.3 Configure the network

- 1) After the mobile WLAN is connected to the wireless network of the Smart WiFi module, return to the network configuration page of the APP and click the NEXT button to enter the WiFi network page.
- 2) On the WiFi network page, click the choose network button, select the router wireless network to which the Smart WiFi module needs to connect, enter the router wireless network password and click the Connect button.
- 3) And then wait for the Smart WiFi module to connect to the router's wireless network, which will take some time.

Note: if the LED status of NET is always on, it indicates that the Smart WiFi module has been correctly connected to the server. Otherwise, the Smart WiFi module is not connected to the server. Then you can use the diagnostic function of the APP or according to the fault appendix to troubleshoot the problem.

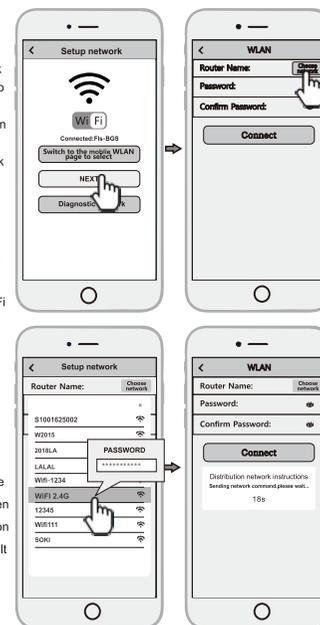

4. Create the plant

After the Smart WiFi module is connected to the server, it will transmit the data of the solar device to the server. And after the plant is created, users can view and manage the solar device via the APP or web browser.

4.1 Manage device via APP

- 4.1.1 Register an account
Run the APP, enter the login page, click the register button, fill in the relevant information, and register an account.
- 4.1.2 Adding devices


- 1) After logging into the APP with an account, enter the home page, click the Device button to enter the device interface.
- 2) Click the + button to enter the Add Device page, and fill in the relevant information as required.

Note: Device SN refers to a solar device serial number, such as an inverter serial number.

4.1.3 Adding plant

- 1) After adding the device, click the Plant button to enter the plant interface.
- 2) Click the + button to enter the page of adding the plant fill in relevant information as required and finally click the Submit button to add the plant.

4.2 Manage the device via a web browser, please refer to: <https://shine.felicitysolar.com>.

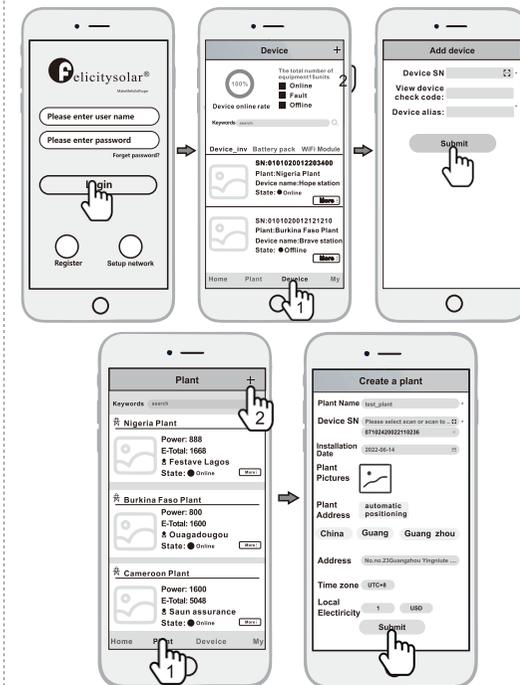


Appendix: Troubleshooting table

LED Status			Indicate	Troubleshooting
PWR	COM	NET		
ON			Normal power supply	Normal
ON	ON		Normal communication with solar device	Normal
ON		ON	Normal communication with the data server	Normal
ON	Fast Flash		Upgrading the solar device	Normal
OFF			Abnormal power supply firmware	1.The power supply of the power interface is abnormal 2. Check whether the screws are tightened 3. Smart WiFi module failure
ON	OFF or Slow Flash		Abnormal communication with the solar device	1. Check that the screws are tightened 2. Check whether the RJ45 port connection is abnormal
ON		Flash	Abnormal communication with the router or the data server	1. Check the router information 1) Confirm whether to configure wireless information to connect to the router 2) The router name should consist of English letters and numbers, it does not support special symbols 3) Confirm whether the router connected to the Smart WiFi module can connect to the Internet 2. Check if you filled in the correct name and password of the router when configuring it 3. Confirm whether the signal quality between the Smart WiFi module and the router is good

菲利斯 Smart WiFi 采集器

快速安装指南

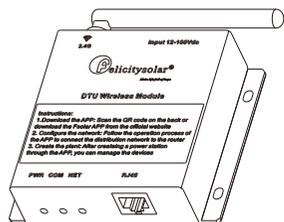

358-010357-00

1. 采集器说明

1.1 采集器型号

NO	NAME	MODEL	WIFI NETWORK	PICTURE
1	Smart WiFi DTU-S	IOTH2407	2.4G WiFi	
2	Smart WiFi DTU-M	IOTH2406	2.4G WiFi	

LED 状态


PWR	亮	电源供电正常
COM	亮	与太阳能设备通信正常
NET	亮	与数据服务器通信正常

Detailed Pin Function Of RJ45 Port:

		IOTH2406	IOTH2407
	PIN1	NA	RS232-RX
	PIN2	NA	RS232-TX
	PIN3	NA	12V DC Input
	PIN4	NA	GND
	PIN5	RS485-B	NA
	PIN6	RS485-A	NA
	PIN7	NA	NA
	PIN8	NA	NA

2. 电气连接

Smart WiFi DTU-S 的 RJ45 支持 RS232 和电源接口，如果设备的 RJ45 接口不能提供 12V DC 给 Smart WiFi DTU-S，那么 Smart WiFi DTU-S 和 DTU-M 一样需要单独接入电源。

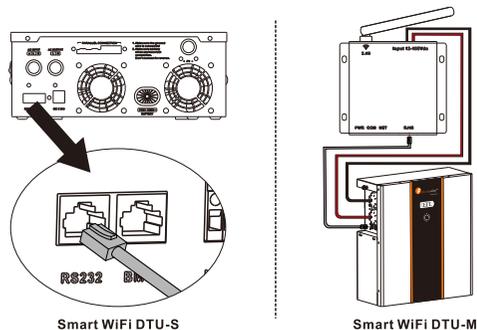

3. 配置网络

3.1 APP 下载

扫描右边二维码，下载 APP。




Fsolrar APP

3.2 连接采集器无线网

配置手机 WLAN 无线局域网连接采集器无线网。

- 运行 Fsolrar APP，进入登录页面，单击【WiFi 配网】按钮，进入网络配置页面。
- 在网络配置页面上，单击【切换至 WLAN 手机页面进行选择】按钮，进入手机 WLAN 页面。

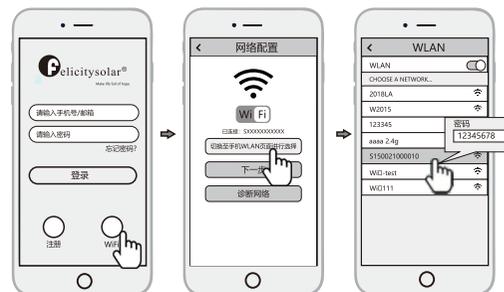

- 在手机 WLAN 页面，找到对应的采集器无线网名称（SSID），以 S 开头（如 Snnxxxxxxxxx），其中 xxxxxxxxxx 与采集器序列号后 10 位是相同的，输入采集器无线网密码（默认密码：12345678），连接该无线网。


3.3 配置网络参数

- 手机 WLAN 无线局域网连接到采集器无线网后，返回到 APP 应用输入的网络配置页面，并单击【下一步】按钮，进入 WiFi 配网页面。

- 在 WiFi 配网页面，点击【选择网络】按钮，选择采集器需要连接的路由器无线网，输入路由器无线网密码，然后单击【连接】按钮。

- 最后等待采集器连接该路由器无线网。

注：如果 NET 指示灯状态是常亮，说明采集器与服务器建立了连接。否则，采集器没有与服务器建立连接，可以使用 APP 的诊断功能或根据故障附录表，可排查问题。

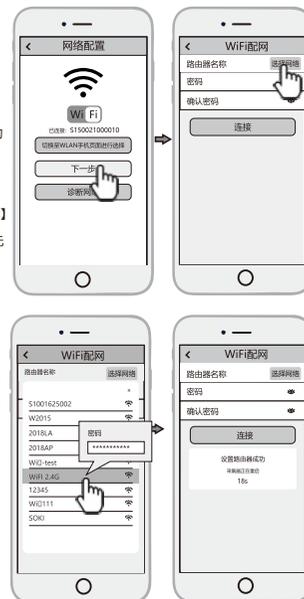

4. 新增电站

采集器与服务器建立连接后，将传输太阳能设备的数据至服务器。用户通过建立电站后，即可通过 APP 或 web 浏览器查看和管理太阳能设备。

4.1 通过 APP 管理设备

4.1.1 注册账号

运行 APP，进入登录页面，单击注册按钮，填写相关信息，进行注册。

4.1.2 添加设备


- 使用账号登录 APP 后，进入首页，单击【设备】按钮，进入设备页面。
- 单击【+】按钮，进入添加设备页面，按要求填写相关信息。

注：设备序列号是指太阳能设备序列号，如：逆变器序列号。

4.1.3 添加电站

- 添加完设备后，再单击【电站】按钮，进入电站页面。
- 单击【+】按钮，进入新增电站页面，按要求填写相关信息，单击确定按钮即可新增电站。

4.2 通过 web 浏览器管理设备，请参考：<https://shine.felicitysolar.com>。

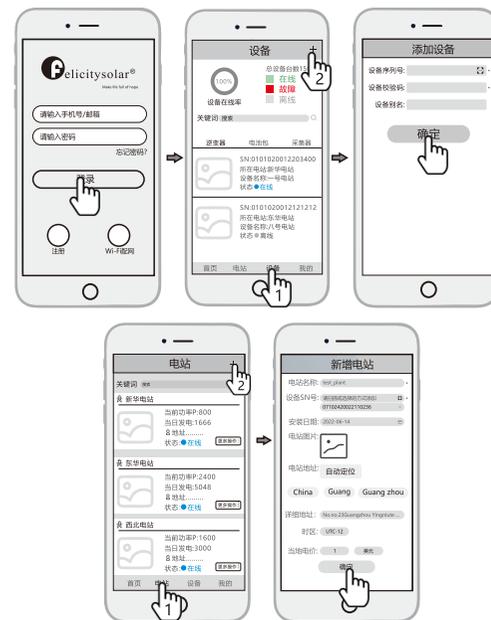

附：故障排查表

LED 状态			工作状态	排查
PWR	COM	NET		
亮			供电正常	正常工作
亮	亮		与太阳能设备通信正常	正常工作
亮	亮	亮	与数据服务器通信正常	正常工作
亮	快闪		正在升级太阳能设备程序	正常工作
灭			供电异常	1.检查是否正确安装螺丝钉 2.检查供电接口连接是否有异常
亮	灭或慢闪		与太阳能设备通信异常	1.检查是否正确安装螺丝钉 2.检查供电接口连接是否有异常
亮		闪	与路由器或服务器通信异常	1.检查路由器 1) 确认是否有配置连接路由器 2) 路由器的无线名称仅支持英文和数字组成，不支持中文名称 3) 确认采集器连接的路由器是否可以正常连接 internet 2.检查配置连接路由器的账户和密码是否正确 3.检查采集器与路由器之间的信号强度是否良好